


OWNER'S GUIDE

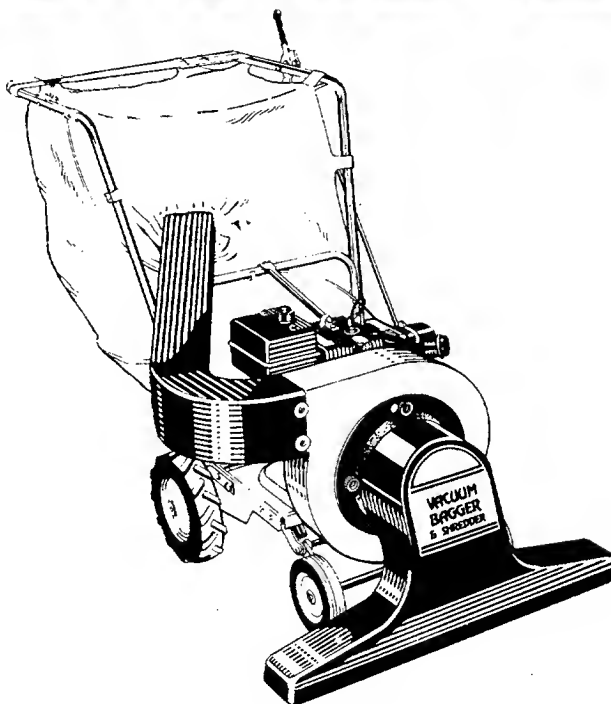

ASSEMBLY • OPERATION • MAINTENANCE • PARTS

POWER VACUUMS

Important:

**Read Safety Rules and
Instructions Carefully**

Model Numbers

**241-670A
241-680A**

INDEX

Safe Operation Practices	3	Lubrication	5
Assembly Instructions	4	Exploded Views	6,8,10,11
Operation Instructions	5	Repair Parts List	7,9,10,11
Adjustments	5	Parts Information.....	Back Cover

LIMITED WARRANTY

For one year from the date of original retail purchase, MTD PRODUCTS INC will either repair or replace, at its option, free of charge, F.O.B. factory or authorized service firm, any part or parts found to be defective in material or workmanship. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by MTD PRODUCTS INC.

This warranty will not apply to any part which has become inoperative due to misuse, excessive use, accident, neglect, improper maintenance, alterations, or unless the unit has been operated and maintained in accordance with the instructions furnished. This warranty does not apply to the engine, motor, battery, battery charger or component parts thereof. Please refer to the applicable manufacturer's warranty on these items.

This warranty will not apply where the unit has been used commercially.

Warranty service is available through your local authorized service dealer or distributor. If you do not know the dealer or distributor in your area, please write to the Customer Service Department of MTD.

The return of a complete unit will not be accepted by the factory unless prior written permission has been extended by MTD.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

WARNING TO PURCHASERS OF INTERNAL COMBUSTION ENGINE EQUIPPED MACHINERY OR DEVICES IN THE STATE OF CALIFORNIA

The equipment which you have just purchased does not have a spark arrester. If this equipment is used on any forest covered land, brush covered land, or grass covered unimproved land in the State of California, before using on such land, the California law requires that a spark arrester be provided. In addition, spark arrester is required by law to be in effective working order. The spark arrester must be attached to the exhaust system and comply with Section 4442 of the California Public Resources Code.

IMPORTANT

It is suggested that this manual be read in its entirety before attempting to assemble or operate. Keep this manual in a safe place for future reference and for ordering replacement parts.

This unit is shipped WITHOUT GASOLINE or OIL. After assembly, see operating section of this manual for proper fuel and amount.

SAFE OPERATION PRACTICES FOR POWER VACUUMS

1. Read the operating and service instructing manual carefully. Be thoroughly familiar with the controls and proper use of the power vacuum.
2. Never allow children to operate this power vacuum.
3. Keep the area of operation clear of all persons, particularly small children and pets.
4. Check fuel before starting engine. Do not fill fuel tank indoors, when engine is running, or while engine is hot. Wipe off any spilled fuel before starting engine.
5. Do not change engine governor settings.
6. Do not put hands near rotating parts for any reason.
7. If the power vacuum should start to vibrate abnormally, stop the engine and check immediately for the cause. Vibration is generally a warning of trouble.
8. Before cleaning, repairing or inspecting, make certain all moving parts have come to a complete stop. Disconnect spark plug wire and keep wire away from plug to prevent accidental starting. Also keep throttle control lever in the stop position.
9. If the power vacuum should become blocked with debris at any point shut engine off and wait until the impeller comes to a complete stop before attempting to remove the obstruction. Disconnect spark plug wire to prevent accidental starting.
10. Check all bolts for tightness at frequent periods.
11. Never store this power vacuum with fuel in the tank. Allow engine to cool before starting in any enclosure.
12. Keep bag and equipment free of debris when not in use.
13. Never operate this power vacuum unless air duct and vacuum bag are properly affixed in their place. Large zippered end of bag must be closed when operating to prevent objects from being blown out.
14. Never empty vacuum bag when engine is running.
15. Never change inlet nozzle or auxiliary hose attachment when engine is running.
16. The manufacturer recommends that the operator wear safety glasses or some other suitable eye protection when operating this machine.
17. Check the vacuum bag frequently for wear and replace when necessary.

ASSEMBLY INSTRUCTIONS

CONTENTS OF HARDWARE PACK

- (A) 4 Hex Bolts 1/4-20 x 1.25" Long
- (B) 13 Hex Cent. Lock Nuts 1/4-20 Thread
(Model 241-670A Only)
- 16 Hex Cent. Lock Nuts 1/4-20 Thread
(Model 241-680A Only)
- (C) 2 Flat Washers .285" I.D. x .62 O.D. x .059
- (D) 4 Flat Washers .285" I.D. x 1.25" O.D. x .060
- (E) 3 Hex Bolts 1/4-20 x .50" Long
- (F) 3 Flat Washers .28" I.D. x .75" O.D. x .063
- (G) 4 Flat Washers .344" I.D. x .88" O.D. x .063
- (H) 4 Thumb Nuts 5/16-18 Thread
- (I) 1 Deflector
- (J) 2 Hex Bolts 1/4-20 x 1.50" Long*
- (K) 2 Cable Ties*
- (L) 1 Ferrule*
- (M) 1 Control Lever*
- (N) 1 Flat Washer .510" I.D. x .75" O.D.*
- (O) 1 Spacer*

*Self-Propelled Model 241-680A Only

1. Place the upper handle in position. Fasten with four (4) hex bolts (A) and hex center lock nuts (B) provided.
2. Place the air duct liner (studded end first) into the elbow of air duct. See figure 1.

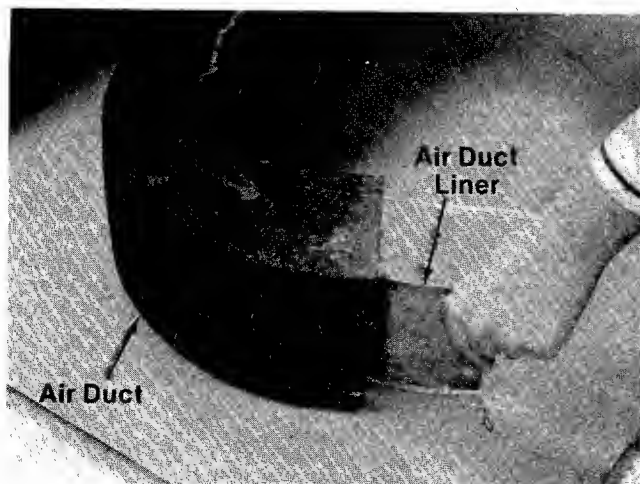


FIGURE 1

3. Insert studs of air duct liner through holes in air duct. Thread on two (2) flat washers (C) and hex nuts (B) several turns—**DO NOT TIGHTEN**. See figure 2.

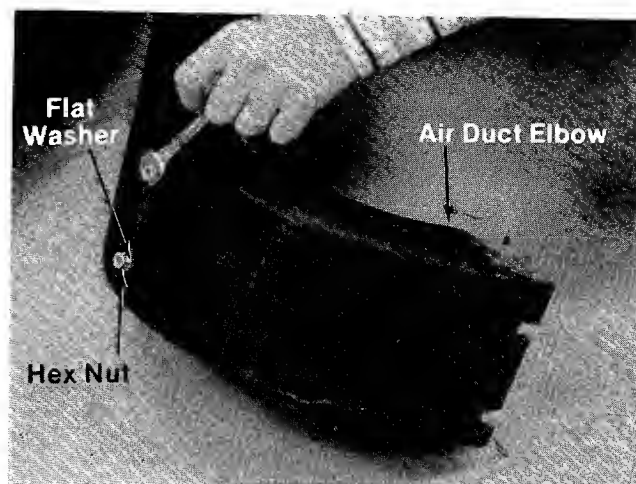


FIGURE 2

4. Place the air duct in position on the blower housing. Fasten with four (4) flat washers (D) and hex nuts (B). See figure 3.

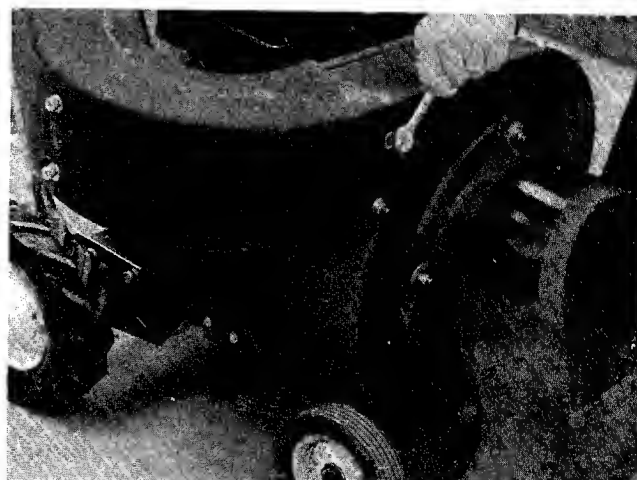


FIGURE 3

5. Tighten the two hex nuts on the air duct liner studs at the air duct elbow.
6. Slide the vacuum bag over the back of the upper handle and snap the four flaps to hold the bag.
7. Fasten the deflector (I) on the top of the air duct with three hex bolts (E), flat washers (F) and hex nuts (B). Refer to illustration on page 6.
8. Slide the bag over the air duct.
9. Fasten the nozzle to the front of the vacuum with four flat washers (G) and thumb nuts (H) provided.

Use the following steps on the self propelled unit only (Model 241-680A).

10. Fasten the throttle control to the right hand side of the upper handle with one hex bolt (J) and hex center lock nut (B) provided.

11. Secure throttle control cable to the lower handle with the cable ties (K) provided.
12. Place ferrule (U) through control level (M).
13. Place flat washer (N) over ferrule. Thread control rod into ferrule about eight or nine turns.
14. Hook formed end of control rod in the shifting finger.
15. Place curved face of spacer toward the outside of upper handle left hand side.
16. Fasten control lever in position with hex bolt (J) and two hex nuts (B) provided.
17. Engage and disengage control lever, checking for free pivoting action. It may be necessary to readjust the control rod.

OPERATION

PRE-START PREPARATIONS

Service engine with gas and oil. See engine manual packed with lawn mower for complete instructions for care and maintenance of engine. **READ DIRECTIONS CAREFULLY.**

START ENGINE

After the engine has been properly fueled and oiled (refer to engine operating and maintenance instructions), start engine following the appropriate instructions.

Push Model (241-670A)

1. Move throttle control lever on engine to START position.
2. Crank engine. Pull recoil with a quick firm pull. Do not pull out so far the rope stops with a jerk as this will cause rope failure. Do not allow rope and handle to snap back into place.
3. After two or three full firm pulls on recoil (or as soon as engine fires), move speed control to run position.

Self Propelled Model (241-680A)

1. Place drive engagement lever in the neutral position (towards the operator).
2. Move throttle control lever on handle to START position.
3. Crank engine. Pull recoil with a quick firm pull. Do not pull out so far that rope stops with a jerk as this will cause rope failure. Do not allow rope and handle to snap back into place.

TO STOP ENGINE

1. To stop engine, move throttle control level to STOP position.
2. Disconnect spark plug wire and ground to prevent accidental starting while equipment is unattended.

Operate a new engine at intermediate speeds and light load for the first few hours as you would a new automotive engine.

ADJUSTMENTS

HEIGHT ADJUSTMENT

To adjust the height of the nozzle, stand on the right hand side of vacuum and move the index handle towards the engine. Move handle towards rear of unit to lower height. Move the handle forward to raise the height.

CARBURETOR ADJUSTMENT

If carburetor needs adjustment to start or for operation, see "Carburetor Adjustment" section of engine manual.

LUBRICATION


Wheels—Rear wheels are provided with oil lite bearings. Place a few drops of SAE 30 oil on each bearing once a season.

Gear Box (Model 241-680A only)—The gear box is lubricated with 2 ounces of High Temp. (450° F.) grease. Order part number 727-0120. Periodically check lubricate level by removing the two self-tapping screws on the gear box cover and lifting off the cover. Do not change grease; simply add if necessary.

Differential (Model 241-680A only)—The differential is sealed at the factory and does not require checking. If disassembled for any reason, lubricate with 2 ounces of High Temp. (450° F.) grease. Order part number 727-0120.

241-670A 241-680A

IF YOU WRITE TO US ABOUT THIS ARTICLE
OR IF YOU ORDER REPLACEMENT PARTS AL-
WAYS MENTION THIS MODEL & SERIAL NO
MODEL

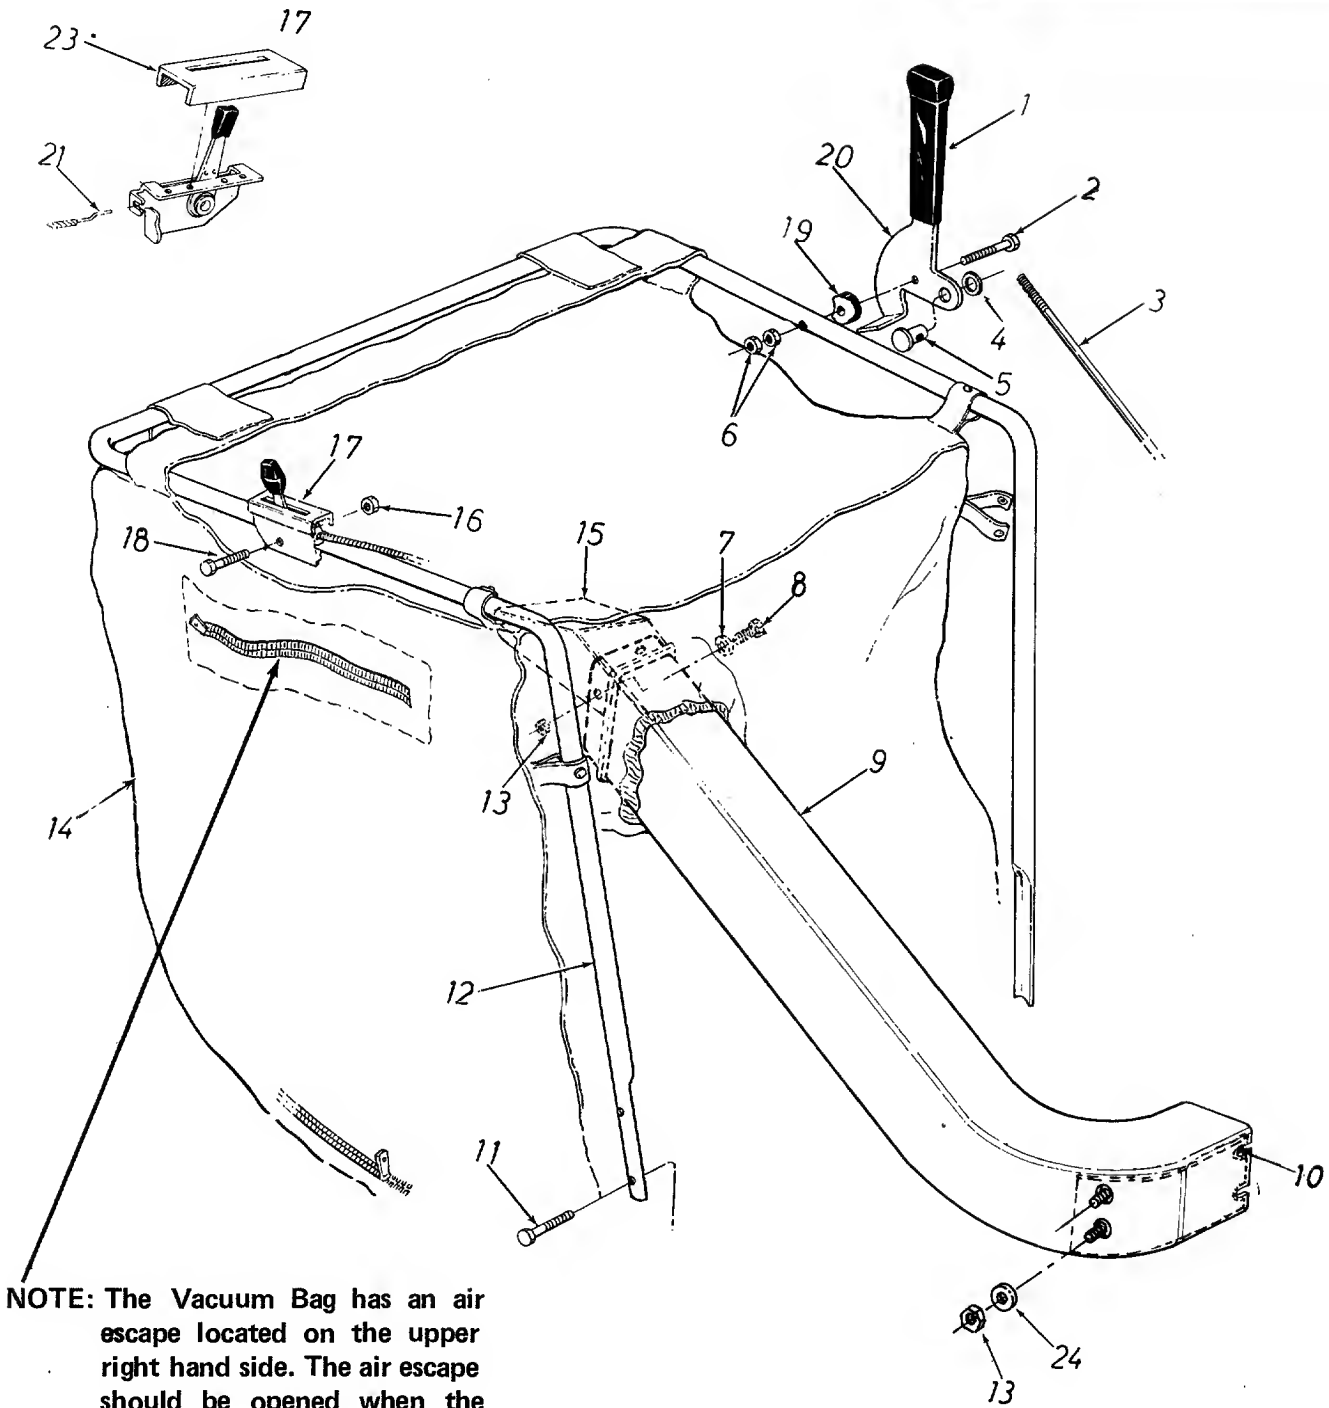

EXPLODED VIEW OF UPPER HANDLE

241-670A

241-680A

PARTS LIST FOR MODELS 241-670A AND 241-680A

Ref. No.	Part No.	Color Code	Description	New Part
1	720-0142		Grip (680A)	
2	710-0606		Hex Bolt 1/4-20 x 1.50" Lg.* (680A)	
3	711-0596		Control Rod (680A)	
4	736-0108		Fl. Wash. .510" I.D. x .75" O.D. (680A)	
5	711-0179		Adj. Ferrule (680A)	
6	712-0107		Hex Center L-Nut 1/4-20 Thd. (680A)	
7	736-0173		Flat Wash. .28" I.D. x .75" O.D. x .063	
8	710-0289		Hex Bolt 1/4-20 x .50" Lg.*	
9	731-0404		Air Duct	
10	13693		Air Duct Liner	
11	710-0106		Hex Bolt 1/4-20 x 1.25" Lg.*	
12	12234		Upper Handle	
13	712-0107		Hex Center L-Nut 1/4-20 Thd.	
14	764-0127		Vacuum Bag	
15	12104		Deflector	
16	712-0107		Hex Center L-Nut 1/4-20 Thd. (680A)	
17	746-0202		Throttle Control Ass'y.— Comp. (680A)	
18	710-0606		Hex Bolt 1/4-20 x 1.50" Lg.* (680A)	
19	748-0210		Spacer (680A)	
20	12226		Control Lever (680A)	
21	746-0229		Conduit and Wire (680A)	
23	731-0344		Plastic Label (680A)	
24	736-0463		Fl.-Wash. .285" I.D. x .62" O.D. x .059	

*For faster service obtain standard nuts, bolts and washers locally. If these items cannot be obtained locally, order by part number and size as shown on parts list.

(488—Mack Truck Yellow)

When ordering parts, if color or finish is important use the appropriate color code shown above. (e.g. Mack Truck Yellow Finish—12236 (438).)


NOTE: The engine is not under warranty by the vacuum manufacturer...If repairs or service is needed on the engine, please contact your nearest authorized engine service outlet. Check the "Yellow Pages" of your telephone book under "Engines—Gasoline."



NOTE

This instruction manual covers various models and all specifications shown do not necessarily apply to your model. Specifications subject to change without notice or obligation.

241-670A 241-680A

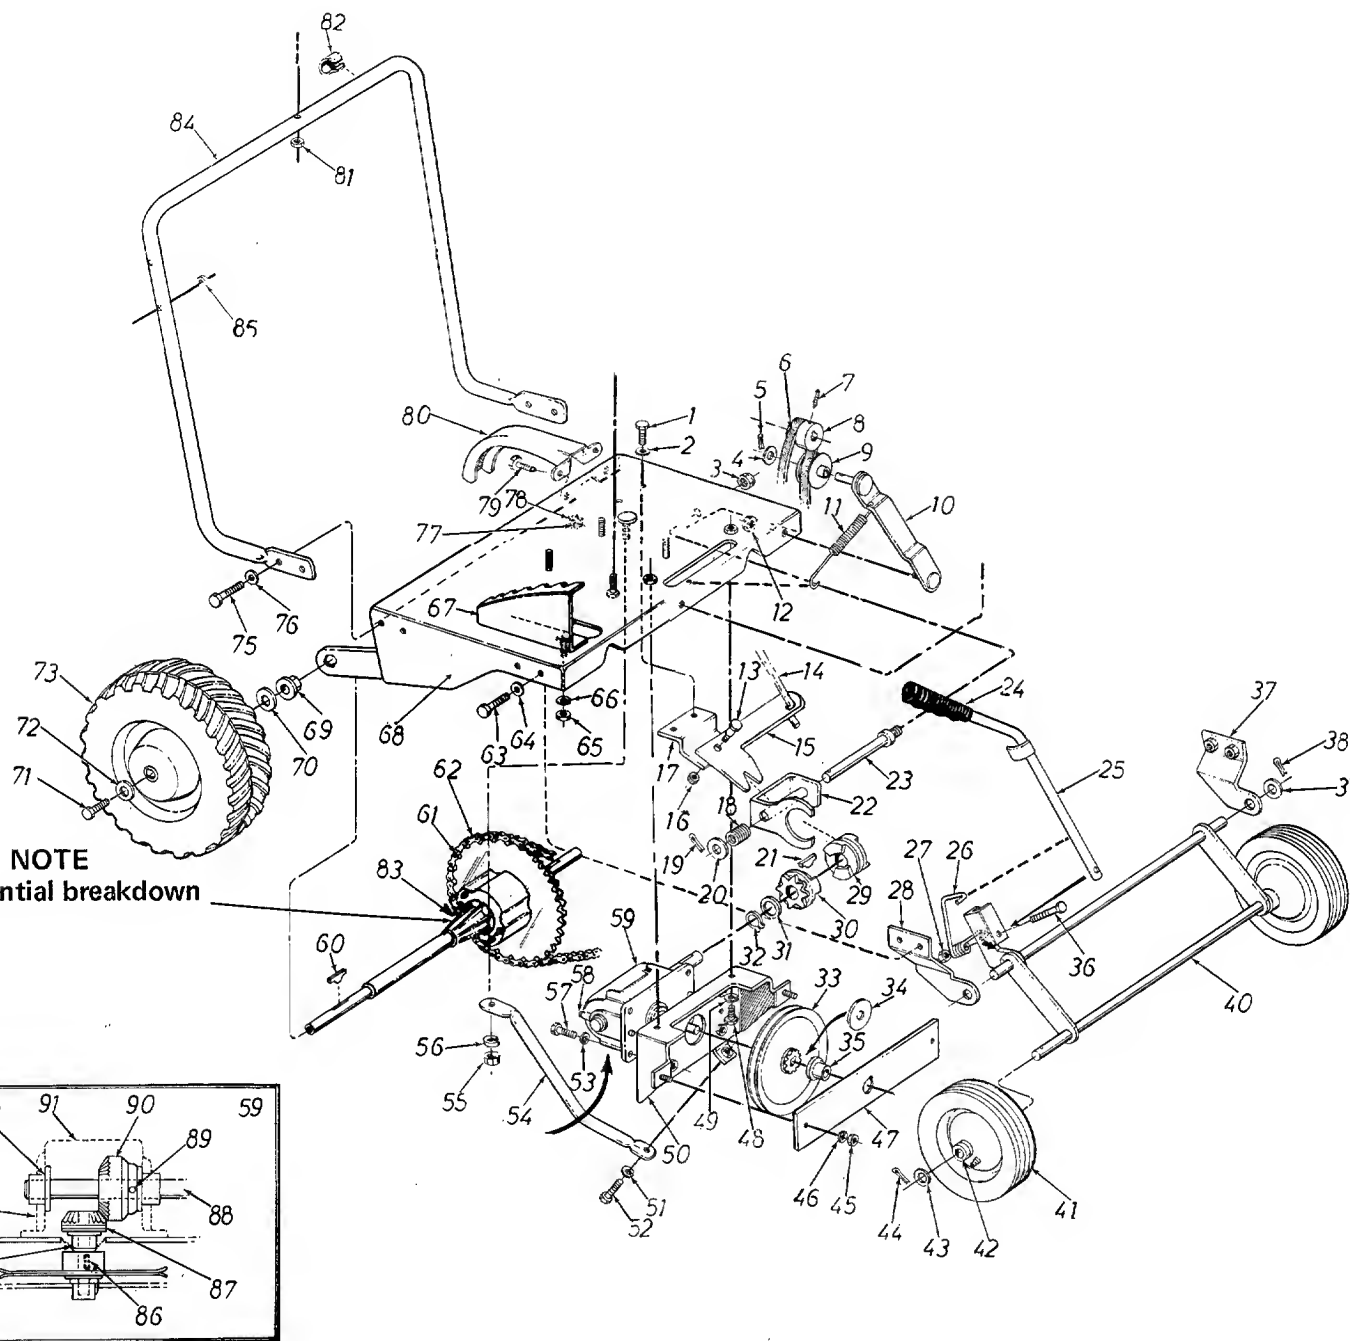


EXPLODED VIEW OF FRAME

241-670A/680A PARTS LIST FOR MODELS 241-670A AND 241-680A

REF. NO.	PART NO. COLOR CODE	DESCRIPTION	NEW PART	REF. NO.	PART NO. COLOR CODE	DESCRIPTION	NEW PART
1	710-0258	Hex Scr. 1/4-20 x .62" Lg.* (680A)		49	736-0119	L-Wash. 5/16" Scr.* (680A)	
2	736-0329	Spring L-Wash. 1/4" Scr.* (680A)		50	12211 —488	Gear Box Mtg. Brkt. Ass'y. (680A)	
3	712-0116	Hex Ins. L-Nut 3/8-24 Thd. (680A)		51	736-0119	L-Wash. 5/16" Scr.* (680A)	
4	736-0117	FI-Wash. (680A)		52	710-0118	Hex Scr. 5/16-18 x .75" Lg.* (680A)	
5	714-0127	Cotter Pin 1/16" Dia. x .75" (680A)		53	736-0329	L-Wash. 1/4" Scr.* (680A)	
6	754-0176	"V"-Belt 1/4" x 22.76" Lg. (680A)		54	12222 —488	Gear Box Brace (680A)	
7	710-0938	Set Scr. 1/4-28 x .25" Lg. (680A)		55	712-0267	Hex Nut 5/16-18 Thd.* (680A)	
8	711-0614	P.T.O. Sheave (680A)		56	736-0119	L-Wash. 5/16" Scr. (680A)	
9	756-0194	Idler Pulley (680A)		57	710-0258	Hex Scr. 1/4-20 x .62" Lg.* (680A)	
10	12206	Idler Brkt. Ass'y. (680A)		58	710-0148	Hex Wash. Hd. F-Tapp Scr. #8 -32 x .38" Lg. (680A)	
11	732-0157	Spring .38" O.D. (680A)		59	717-0325	Gear Box Ass'y.—Comp. (680A)	
12	712-0429	Hex Ins. L-Nut 5/16-18 Thd. (680A)		60	714-0126	#9 Hi-Pro-Key 3/16" x 3/4" Dia. (680A)	
13	738-0140	Shoulder Bolt .437" Dia. x .180 (680A)		61	713-0118	Chain #41 x 61 Links (680A)	
14	711-0596	Control Rod (680A)		62	713-0723	#41 Master Link 1/2" Pitch Type II (680A)	
15	12231	Shifting Finger (680A)		63	710-0118	Hex Scr. 5/16-18 x .75" Lg.*	
16	712-0429	Hex Ins. L-Nut 5/16-18 Thd. (680A)		64	736-0119	L-Wash. 5/16" Scr.*	
17	12213 —488	Pivot Brkt. Ass'y. (680A)		65	712-0267	Hex Nut 5/16-18 Thd.*	
18	732-0273	Compression Spring (680A)		66	736-0119	L-Wash. 5/16" Scr.*	
19	714-0474	Cotter Pin 1/8" Dia. x .75" Lg.* (680A)		67	12224	Index Plate Ass'y.	
20	736-0300	FI-Wash. (680A)		68	12200 —488	Engine Mtg. Frame Ass'y.	
21	714-0137	Hi-Pro-Key 3/16" x 3/4" Dia. x 1.062" Lg. (680A)		69	748-0227	Hex Flange Bearing .630" I.D.	
22	05054	Shifting Yoke (680A)		70	736-0116	FI-Wash.	
23	711-0594	Shifting Fork Rod (680A)		71	710-0258	Hex Scr. 1/4-20 x .62" Lg.*	
24	720-0132	Grip		72	736-0211	FI-Wash.	
25	12208	Index Handle Ass'y.		73	734-0576	Rear Wheel Ass'y.—Comp.	
26	732-0231	Torsion Spring		75	710-0118	Hex Scr. 5/16-18 x .75" Lg.*	
27	712-0107	Hex Center L-Nut 1/4-20 Thd.		76	736-0119	L-Wash. 5/16" Scr.*	
28	12240 —488	Pivot Brkt. Ass'y.—R.H.		77	712-0287	Hex Nut 1/4-20 Thd.* (680A)	
29	748-0161	Clutch Collar (680A)		78	736-0329	L-Wash. 1/4" Scr.* (680A)	
30	748-0164	Sprocket 10 Teeth (680A)		79	710-0258	Hex Scr. 1/4-20 x .62" Lg.* (680A)	
31	736-0116	FI-Wash. (680A)		80	12232	Chain Guard (680A)	
32	716-0115	Snap Ring for .625" Dia. (680A)		81	712-0107	Hex Center L-Nut 1/4-20 Thd.	
33	756-0195	Drive Pulley (680A)		82	726-0188	Cable Tie (680A)	
34	736-0160	FI-Wash. (680A)		83	738-0185	Rear Axle (670A)	
35	748-0742	Flange Bearing (680A)			717-0353	Differential Ass'y.—Comp. (680A)	
36	710-0136	Hex Scr. 1/4-20 x 1.75" Lg.*		84	12233	Lower Handle	
37	12241 —488	Pivot Brkt. Ass'y.—L.H.		85	712-0107	Hex Center L-Nut 1/4-20 Thd.	
38	714-0115	Cotter Pin 1/8" Dia. x 1.00" Lg.*		86	714-0229	#2 Woodruff Key 3/32 x 1/2" Dia. Hdn. (680A)	
39	736-0116	FI-Wash.		87	748-0136	Pinion Gear .50" I.D. x 14 Teeth (680A)	
40	12217 —488	Front Axle Ass'y.		88	711-0593	Drive Shaft (680A)	
41	734-0974	Front Wheel Ass'y.—Comp.		89	715-0246	Spring Pin Spiral 3/16" Dia. x 1.25 (680A)	
42	748-0176	Flange Bearing .630" I.D.		90	748-0135	Bevel Gear .62" I.D. 28 Teeth (680A)	
43	736-0116	FI-Wash.		91	08187	Gear Box Cover (680A)	
44	714-0115	Cotter Pin 1/8" Dia. x 1.00" Lg.*		92	748-0110	Flange Bearing .630" I.D. (680A)	
45	712-0107	Hex Center L-Nut 1/4-20 Thd. (680A)		93	08189	Gear Box (680A)	
46	736-0329	L-Wash. 1/4" Scr.* (680A)		94	748-0108	Flange Bearing .503" I.D. (680A)	
47	12227 —488	Bearing Support Brkt. (680A)		95	710-0442	Hex Scr. 5/16-18 x 1.50 Lg.*	
48	710-0118	Hex Scr. 5/16-18 x .75" Lg. (680A)					

241-670A 241-680A

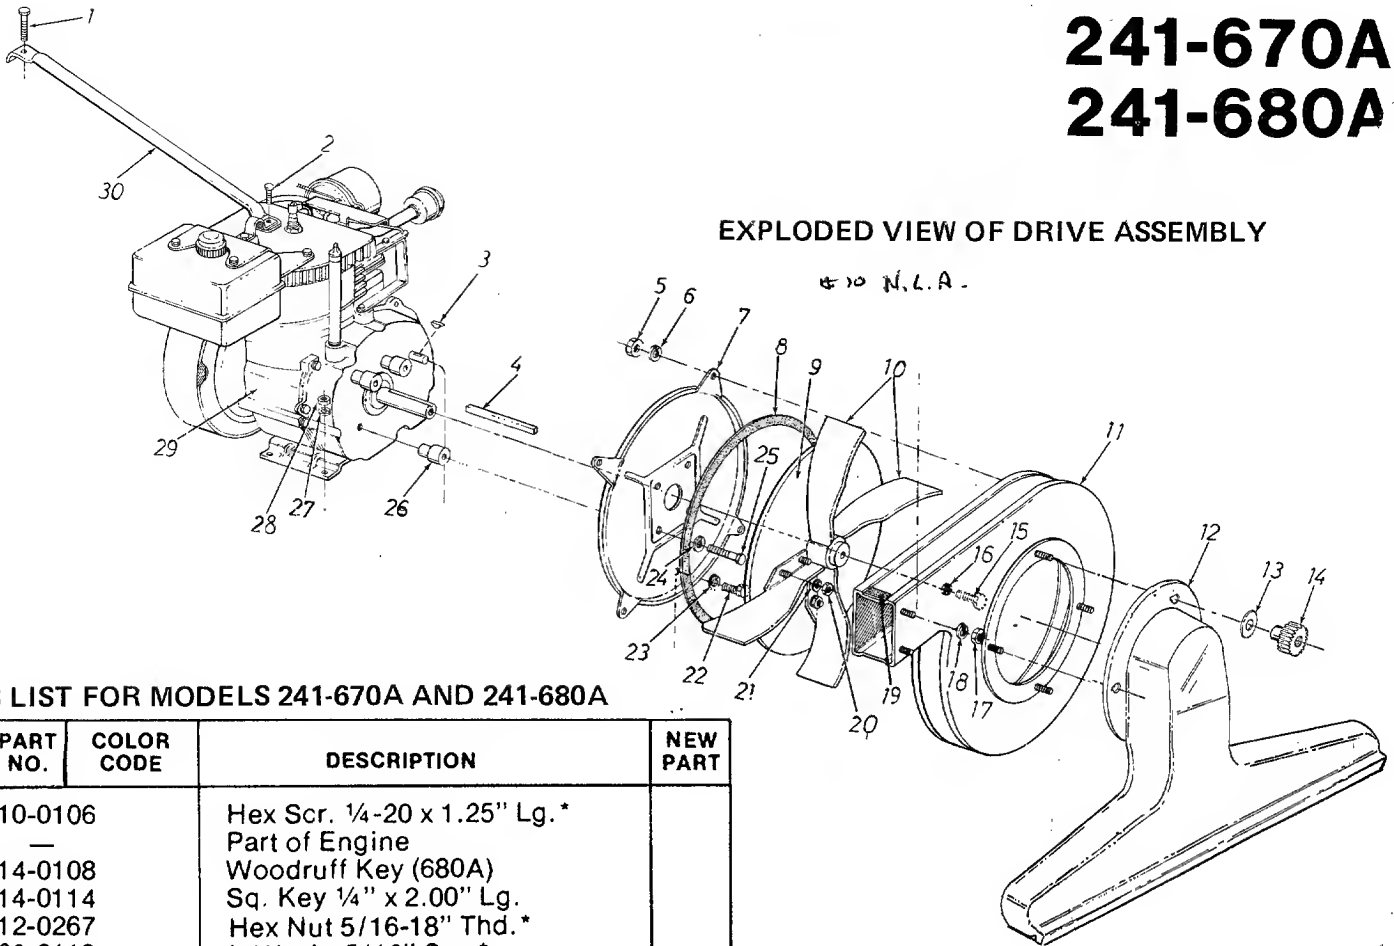

PARTS LIST FOR MODELS 241-670A AND 241-680A

REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART
1	710-0106		Hex Scr. 1/4-20 x 1.25" Lg. *	
2	—		Part of Engine	
3	714-0108		Woodruff Key (680A)	
4	714-0114		Sq. Key 1/4" x 2.00" Lg.	
5	712-0267		Hex Nut 5/16-18" Thd. *	
6	736-0119		L-Wash. 5/16" Scr. *	
7	11452 —488		Hopper to Engine Mtg. Plate	
8	721-0128		Gasket Strip—Pressure Sen.	
9	12203 —488		Vane Plate Ass'y.	
10	12230 —488		Air Vane — N.L.A.	
11	13320 —488		Blower Housing Ass'y.	
12	731-0211		Nozzle	
13	736-0159		Fl.-Wash. .344" I.D. x .88" O.D. x .063	
14	712-0254		Thumb Nut 5/16-18 Thd.,	
15	710-0239		Hex Scr. 3/8-24 x 1.75" Lg. H.T.	
16	736-0217		L-Wash. 3/8" Scr. Heavy Duty	
17	712-0107		Hex Center L-Nut 1/4-20 Thd.	
18	736-0211		Fl.-Wash. .285" I.D. x 1.25" O.D. x .060	
19	721-0129		Dust Pad—Pressure Sensitive	
20	712-0241		Hex Nut 3/8-24" Thd. *	
21	736-0217		L-Wash. 3/8" Scr. Heavy Duty	
22	710-0118		Hex Scr. 5/16-18 x .75" Lg. *	
23	736-0119		L-Wash. 5/16" Scr. *	
24	736-0119		L-Wash. 5/16" Scr. *	
25	710-0409		Hex Scr. 5/16-24 x 1.75" Lg. *	
26	711-0591		Engine Spacer	
27	736-0119		L-Wash. 5/16" Scr. *	
28	712-0267		Hex Nut 5/16-18 Thd. *	
29	—		Engine	
30	749-0326		Engine Brace (670A)	
	12228		Engine Brace (680A)	

(488—Mack Truck Yellow)


When ordering parts, if color or finish is important use the appropriate color code shown above. (e.g. Mack Truck Yellow Finish—12236 (488).)

NOTE: The engine is not under warranty by the vacuum manufacturer...If repairs or service is needed on the engine, please contact your nearest authorized engine service outlet. Check the "Yellow Pages" of your telephone book under "Engines—Gasoline."

Find It Fast
In The
Yellow Pages

*For faster service obtain standard nuts, bolts, and washers locally. If these items cannot be obtained locally, order by part number and size as shown on parts list.

241-680A ONLY

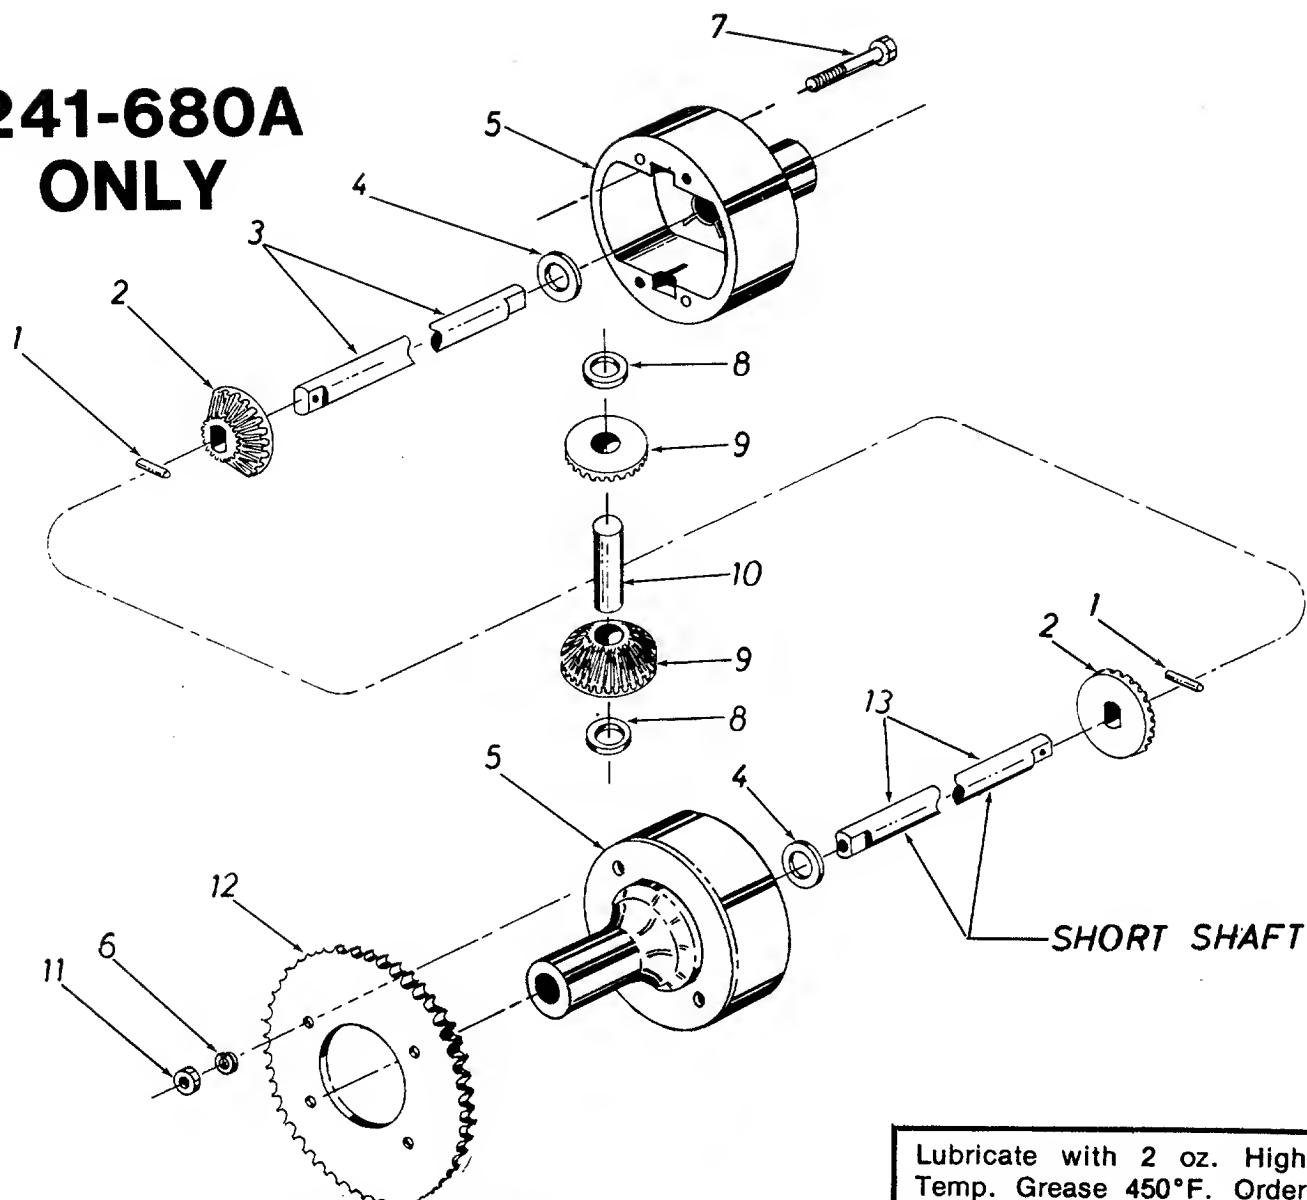

MODEL 717-0353 DIFFERENTIAL ASSEMBLY

PARTS LIST FOR MODEL 241-680A

REF. NO.	PART NO.	Qty. Req'd.	DESCRIPTION	NEW PART
1	715-0247	2	Spring Pin Spir. 3/16" Dia. x 1.00" Lg.	
2	748-0185	2	Gear—Double "D" Hole	
3	738-0218	1	Shaft—Long 15.38" Lg.	
4	736-0188	2	Fl-Wash. .760 I.D. x 1.49 O.D.	
5	717-0341	2	Housing Half	
6	736-0119	2	L-Wash. 5/16" Scr. *	
7	710-0526	2	Hex Scr. 5/16-24 x 4.00" Lg. *	
8	736-0187	2	Fl-Wash. .640 I.D. x 1.24 O.D.	
9	748-0158	2	Gear—Round Hole	
10	711-0276	1	Drive Pin	
11	712-0237	2	Hex Cent. L-Nut 5/16-24 Thd.	
12	09054	1	Sprocket—40 Tooth	
13	738-0217	1	Shaft—Short 8.31" Lg.	

*For faster service obtain standard nuts, bolts and washers locally. If these items cannot be obtained locally, order by part number and size as shown on parts list.

PARTS INFORMATION

POWER EQUIPMENT PARTS AND SERVICE

Parts and service for all MTD manufactured power equipment are available through the authorized service firms listed below. All orders should specify the model number of your unit, part numbers, description of parts and the quantity of each part required.

NOTE: If any parts are found to be missing or defective upon assembly of this unit, write to advise the factory so that immediate replacement can be made.

ALABAMA	BIRMINGHAM
Auto Electric & Carburetor Co.	2625 4th Ave. S.35233
ARKANSAS	FORT SMITH
Mity Mite Motors, Inc.	4515 S. 16th St.72901
	NORTH LITTLE ROCK
Sutton's Lawn Mower Shop	Rt. 4, Box 36872117
CALIFORNIA	PORTERVILLE
Billious	75 North D Street93257
	SAN FRANCISCO
J.W. Jewett Co.	981 Folsom St.94107
COLORADO	DENVER
Colorado Outdoor Power Equip.	527 West Evans80223
FLORIDA	JACKSONVILLE
Radco Distributors	4909 Victor St.32207
	OPA LOCKA
Small Eng. Dist.	2351 N.W. 147th St.33054
GEORGIA	EAST POINT
East Point Cycle & Key	2834 Church St.30344
ILLINOIS	LYONS
Keen Edge Co.	8615 Ogden Ave.60534
INDIANA	ELKHART
Parts & Sales Inc.	2101 Industrial Pkwy.46514
IOWA	DUBUQUE
Power Lawn & Garden Equip.	2551 J.F. Kennedy52001
LOUISIANA	NEW ORLEANS
Suhren Engine Co.	8330 Earhart Blvd.70118
MARYLAND	TAKOMA PARK
Center Supply Co.	6867 New Hampshire Ave.20012
MASSACHUSETTS	SPRINGFIELD
Morton B. Collins Co.	300 Birnie Ave.01107
MICHIGAN	LANSING
Lorenz Service Co.	2500 S. Pennsylvania48910
	MOUNT CLEMENS
Power Equipment Dist.	36463 South Gratiot48043
MINNESOTA	HOPKINS
Hance Distributing Inc.	420 Excelsior Ave. W.55343
MISSISSIPPI	BILOXI
Biloxi Sales & Service, Inc.	506 Caillavet St.39533
MISSOURI	KANSAS CITY
Automotive Equip. Service	3117 Holmes St.64109
	ST. JOSEPH
Ross-Frazier Supply Co.	8th and Monterey64503
	ST. LOUIS
Henzler, Inc.	2015 Lemay Ferry Road 63125
NEW JERSEY	BELLMAWR
Lawnmower Parts Inc.	717 Creek Rd.08030
	RUTHERFORD
Feld Distributor	28 Glen Rd.07070
NEW YORK	CARTHAGE
Gamble Dist., Inc.	West End Ave.13619

BRIGGS AND STRATTON, TECUMSEH AND PEERLESS PARTS AND SERVICE

Briggs & Stratton, Tecumseh and Peerless parts and service should be handled by your nearest authorized engine service firm. Check the yellow pages of your telephone directory under the listing **Engines—Gasoline**, Briggs & Stratton or Tecumseh Lauson.

NORTH CAROLINA	GOLDSBORO
Smith Hardware Co.	515 N. George St.27530
	GREENSBORO
Dixie Sales Company	335 N. Green27402
OHIO	CARROLL
Stebe's Mid-State Mower Supply	Box 366, 71 High St.43112
	CLEVELAND
Bleckrie, Inc.	7900 Lorain Ave.44102
	WADSWORTH
National Central	687 Seville Rd.44281
	YOUNGSTOWN
Burton Supply Co.	1301 Logan Ave.44501
OKLAHOMA	MUSKOGEE
Victory Motors, Inc.	605 S. Cherokee74401
	OKLAHOMA CITY
Forest Sales Inc.	6415 N. Olive73116
OREGON	PORTLAND
Kenton Supply Co.	8216 N. Denver Ave.97217
PENNSYLVANIA	CHESTER
Stull Equipment Corp.	742 W. Front St.19013
	HARRISBURG
EECO Inc.	4021 N. 6th St.17110
	PHILADELPHIA
Thompson Rubber Co.	5222-24 N. Fifth St.19120
	PITTSBURGH
Bluemont Co.	11125 Frankstown Rd.15237
	PUNXSUTAWNEY
Frank Roberts & Sons	R.D. 2157
TENNESSEE	KNOXVILLE
Master Repair Service	2000 Western Ave.37921
	MEMPHIS
American Sales & Service, Inc.	1922 Lynnbrook38116
TEXAS	DALLAS
Marr Brothers, Inc.	423 E. Jefferson75203
	FORT WORTH
Woodson Sales Corp.	1702 N. Sylvania76111
	HOUSTON
Bullard Supply Co.	2409 Commerce St.77003
	SAN ANTONIO
Catto & Putty, Inc.	414 Live Oak78298
UTAH	SALT LAKE CITY
A-1 Engine & Mower Co.	437 E. 9th St.84111
VERMONT	BURLINGTON
Vermont Hdwe. Co. Inc.	180 Flynn Ave.05401
VIRGINIA	RICHMOND
RBI Corp.	963 Myers St.23260
WASHINGTON	SEATTLE
Bailey's Inc.	1414 14th Ave.98102
WEST VIRGINIA	CHARLESTON
Young's, Inc.	233 Virginia St., E.25301
WISCONSIN	MARSHFIELD
Power Pac	301 E. 29th St.54449

WARRANTY PARTS AND SERVICE POLICY

The purpose of warranty is to protect the customer from defects in workmanship and materials, defects which are NOT detected at the time of manufacture. It does not provide for the unlimited and unrestricted replacement of parts. Use and maintenance are the responsibility of the customer. The manufacturer cannot assume responsibility for conditions over which it has no control. Simply put, if it's the manufacturer's fault, it's the manufacturer's responsibility; if it's the customer's fault, it's the customer's responsibility.

CLAIMS AGAINST THE MANUFACTURER'S WARRANTY INCLUDES:

1. Replacement of Missing Parts on new equipment.
2. Replacement of Defective Parts within the warranty period.
3. Repair of Defects within the warranty period.

All claims MUST be substantiated with the following information:

1. Model Number of unit involved.
2. Date unit was purchased or first put into service.
3. Date of failure.
4. Nature of failure.